
BIRDIE-KING II

Schematics and Wiring Diagrams

TRACK CODE

Distributed by:
MONROE Distributing Inc.
2999 Payne Avenue
Cleveland, Ohio 44114
Licensed by Count Co.

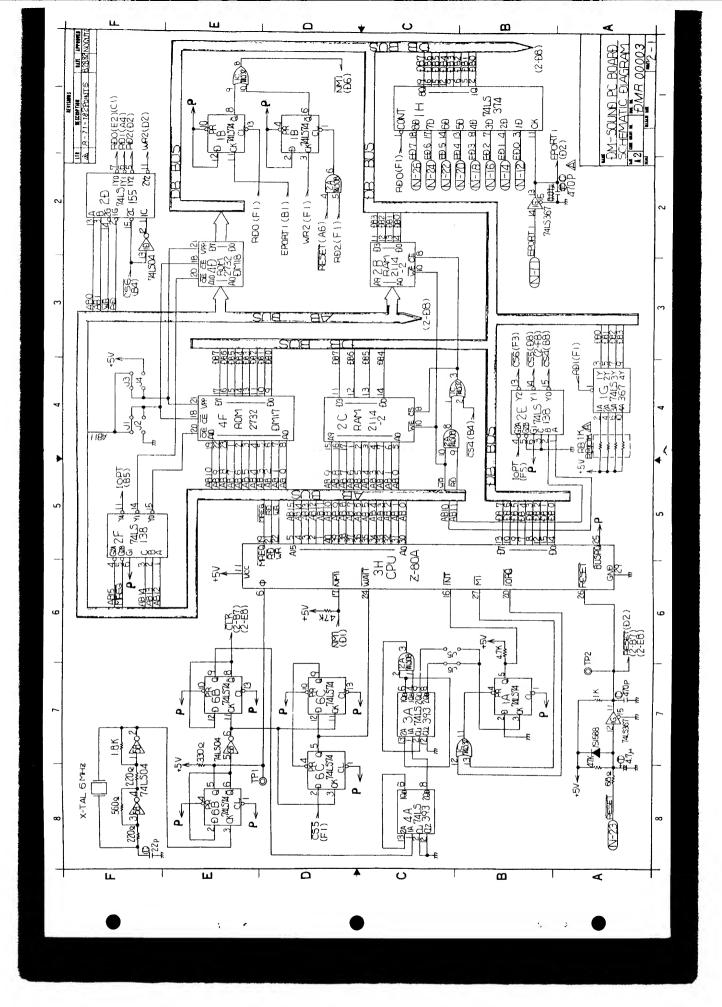

18 PIN EDGE CONNECTOR COMPONENT

								T0 12 V. METER								+5V. TO TRAKBALL ASSY.	
																RED	
⋖	В	ပ	0	ш	щ	I	7	×	٦	Σ	z	a.	œ	S	T)	>
	2	က	4	2	9	7	∞	6	10	Ξ	12	13	14	15	16	17	18
BLACK									JUMPER →		PURPLE L	•			-	W/RED	W/RED
GROUND								+12			+12					+5	+5

NOTE: Some wire colors may vary.

22 PIN EDGE CONNECTOR

	10		2-								_	.RT										7
DER	GROUND	VIDEO GROUND	VIDEO		(SPEAKER) SOUND				Annual Control of the		TILT SWITCH	2 PLAYER START										
SOLDER	BLACK	BLACK	BLUE		GRAY—						W/BLACK	W/YELLOW										
	A	В	С	0	ш	4	Ŧ	٦	¥	_	Μ	Z	۵.	œ	S	_	>	>	>	×	>	7
	1	2	3	4	5	9	7	8	9	9	11	12	13	14	15	16	17	∞	ţ	20	21	22
Þ	BLACK	RED	GREEN	YELLOW	GRAY +			W/ORANGE				ORANGE	BLUE	BROWN	YELLOW	GREEN						
COMPONENT	GROUND	VIDEO	VIDEO	VIDEO SYNC	(SPEAKER) SOUND			COIN SWITCH	RETURN FROM 12 V. METER			1 PLAYER START		DOWN	RIGHT	LEFT						
	Ľ.	2 > 0) 		00								Fre	Tie C	26	(mone)						

NOTE: Some wire colors may vary.

o Adjustments of DIP Switch (Before adjusting, turn the power switch off.)

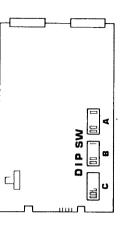


Figure 7

0	DIP Switch (A)	ے.	(A)							Та	Table	1	1
		1	P _o	Position									
Ś	Setting				_	-2	m	7	5	9	^	∞	
		*	Par Play	O Hole									T
		*	Birdie	1 Hole									
		*	Eagle	Z Holes	NO								
		*	Double Eagle	4 Holes									
<u></u>	Hole(s)	_	Par Play	l Hole									
¥	Awarded		Birdie	2 Holes				r					
			Eagle	3 Holes	OFF								
			Double Eagle	4 Holes									
-			Hole in One	3 Holes		NO							
		*	Hole in	9 Holes		OFF				OFF			
12	Free Plan		Free Play	av			ON						
		*	Normal				OFF						
2	Number		6			,		NO	NO.				
	Holes Per		S				1	NO	OFF				
Δ.	Play		7					OFF	NO				
		*	3				ı	OFF	OFF OFF				
Š	Screen Inversion	er	sion				J				NO.		
	(Upright	90	ht Type Machine	ne Only)							OFF		
ٽ	Game Srvle		Upright	t-t								NO.	
			Table									OFF	г –

Factory Adjustment: *

Table	2
-------	---

	Р	osition	1	WAY	(LEFT)	2	WAY	(RIGH	T)
Setting			1	2	3	4	5	6	7	8
l Coin		l Play	ON	ON			ON	ON		
l Coin		2 Plays	OFF	0.11	ON		OFF	0.11	ON	
l Coin		3 Plays	ON	OFF	ON		ON	OFF	011	
1 Coin		4 Plays	OFF			ON	OFF	01.		ON
l Coin	-	5 Plays	ON	ON			ON_	ON		
l Coin	_	6 Plays	OFF	ON	OFF		OFF	ON	OFF	
1 Coin	_	7 Plays	ON	OFF			ON	OFF		
l Coin	_	8 Plays	OFF				OFF			
2 Coins	_	l Play	ON	ON			ON	ON		
3 Coins		l Play	OFF		ON		OFF		ON	
4 Coins		l Play	ON	OFF		1	ON	OFF		
5 Coins		l Play	OFF	011		OFF	OFF			OFF
6 Coins	_	1 Play	ON	ON			ON	ON		
7 Coins	_	l Play	OFF	"	OFF		OFF	<u> </u>	OFF	
8 Coins	_	l Play	ON	OFF			ON	OFF		
9 Coins	_	l Play	OFF				OFF			

o DIP Switch (C)

l a	D.	L e	: 3

O DII DWILCH (O	,								
Setting	Position	1	2	3	4	5	6	7	8
Appearance	Without	ON							
of Crow *	Σį With	OFF							
The hole from	Circle 1,7,11,15,18		ON	ON					
which a crow	8-shape 3,5,9,13,17		ON	ON					
appears and	Circle 4,7,13,18	_	ON	OFF					
flys with	8-shape 1,10,16,17	ê x							
drawing a	Circle 1,10,16,18		OFF	ON					
circle or a	8-shape 4,7,13,17		OFF	ON					
8-shape in the air.	Circle 3,5,9,13,18		0.55	0.00	OFF				
811.	8-shape 1,7,11,15,1	7	OFF	OFF	OFF		,		
Coin Display	No Display					ON			
*	Display					OFF		1	
V D : 1 .	No Display						ON		
Year Display _*	Display						OFF		1
Check	Check							ON	
*	Normal							OFF	
*	l Way								ON
Coin System	2 Way								OFF

.Factory Adjustment: *

